

INTRODUCING THE REVOLUTIONARY

SUPER-AP-1



FLUX RECOVERY SYSTEM

MIGHTY-MIGHT "SUPER-AUTO-PNEUMATIC"



IMPORTANT FEATURES:

- Powerful Air Vacuum (approximately twice as powerful as the standard AP-1 and equivalent to many 3 H.P. electric vacuums).
- Adds no oil or water to the flux and produces no damage to the recovered flux particles, since flux is never in the compressed air stream.
- Vacuum air pump is on the exhaust side and undesirable contaminants, fines and dust are discharged into a very efficient dust bag assembly.
- No moving parts in air pump, and no internal filters to wear
- Very efficient air pump produces a higher vacuum, uses less air, and is quieter than most competitive air models.
- Direct Recycling of Flux back to lower hopper by depressing flux valve levers (one on each side of SUPER-AP-1).
- Optional Automatic Flux Transfer Valve, transfers flux to lower hopper without operator input. (Order SUPER-AP-1-E/P.)
- Two Large Flux Sight Windows (one on each side) indicate when operator must transfer flux to lower hopper by depressing flux valve lever.
- Twice the Flux Capacity of the standard AP-1. (NOTE: Lower hopper determines Total Flux Capacity system can hold!)

SPECIFICATIONS:

- Weight (empty): 30 lbs (13.6 Kg)
- Dimensions: 26.8" (68 cm) H x 8.5" (21.6 cm) W x 10.5" (26.7 cm) D
- Power input: compressed air 14 cfm @ 70-100 psi (use min. I.D. 1/2" hose); no electrical input.
- Comes complete with 5 ft. (1.27m) 1 1/2" flux recovery hose, NZ-1 flux pick-up nozzle, mounting brackets and lower hopper flux level indicators..... ready for installation!

OPTIONAL ACCESSORIES:



FH-1 Flux Hopper. Holds approx. 35 lbs/16 Kg of flux (Lincoln hopper holds 23 lbs /10 Kg). New flux is added through flux port without interrupting weld. SUPER-AP-1 mounts directly to FH-1. Note: Customer must provide separate mounting frame. Does not mount directly to welding head because of its weight.

New Flux added here (same in FH-1).



Flux Hose Mounting Brackets:

- 1) FHM-1 enables linear hose adjustment.
- 2) FHM-1ADJ enables linear and angular hose adjustment.

- AFD-1 adjustable flux dam. Used to support flux on cylindrical weldments.
- MADP-1 adapter plate for mounting to Miller hopper.
- AV-4 electric on/off input air valve to remotely turn SUPER-AP-1 on and off.
- NOZZLES: NZ-1BUTT for butt welds, NZ-1CRN for left and right hand corners; sold as a pair (must use FHM-1ADJ hose bracket for NZ-1BUTT and NZ-1CRN) and NZ-1-4 four inch wide nozzle.
- FP-1 flux port for adding flux to Lincoln or other mfr's flux hopper.
- MAGSEP-1 magnetic separator.
- AFV-2 automatic flux valve and control (use with FH-1, HFH-1 or hoppers without automatic flux valve).



For ordering information please contact:

> 34 Fruit St. Shrewsbury, MA 01545 (U.S.A.) Telephone: (508) 842-2224 Fax: (508) 842-3893